



# ActivFlo Solo Water Conditioner Installation Instructions



In this procedure document we have endeavoured to make the information as accurate as possible.

We cannot accept any responsibility should it be found that in any respect the information is inaccurate or incomplete or becomes so as a result of further developments or otherwise.

**Intatec Ltd**

Airfield Industrial Estate  
Hixon  
Staffordshire  
ST18 0PF

Tel: **01889 272 180**

Fax: **01889 272 181**

email: **sales@intatec.co.uk**

web: **www.intatec.co.uk**



## Introduction

The ActivFlo Solo BSP water conditioner has been designed and engineered for independent component protection, making it the ideal solution for installations that require low flow rates than normal.

The small footprint makes it ideal to protect individual components such as showers, shower outlets, dishwashers and water heaters

For maximum protection we recommend installing your ActivFlo Solo onto the incoming mains supply or the supply to the components, this helps guarantee optimum performance you your equipment.

## Dimensions - AFO12MF




## Installation

To ensure optimum performance of the ActivFlo Solo it is recommended that it is only used with a single component and the required flow rate is confirmed using the selection chart, see page 2 of this leaflet.

The ActivFlo Solo should be installed on the incoming water main, the supply to the individual component or from the shower or water heater to protect the water outlet.

The ActivFlo Solo can be installed into new or existing pipe systems using the threaded connections and following the procedure below;

- Before commencing turn off the water supply and have a container to collect any excess water draining from the pipework.

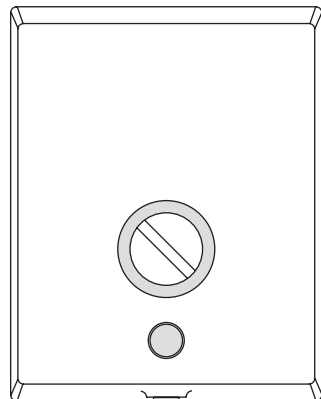

Typical application with ActivFlo Solo on the outlet from an electric shower



## Installation

- Connect the ActivFlo Solo to the component using the female threaded connection and a sealing washer to make a water tight joint.
- Use to 2 flats and a suitably sized spanner when making connections to the ActivFlo Solo.
- The supply to or from the ActivFlo Solo can be made using a flexible hose with a 1/2" connector, a flexible hose for a shower, a riser rail to an overhead soaker or shower head or by direct connection to copper pipework using a compression nut and olive (not supplied).
- Turn on the water supply and check to ensure water tight joints.

## ActivFlo


Maximum operating Temperature: 99°C

Insulation will be required below 0°C

Maximum pressure: 16 bar

Minimum pressure: 0.1 bar

## Operational Flow Rates

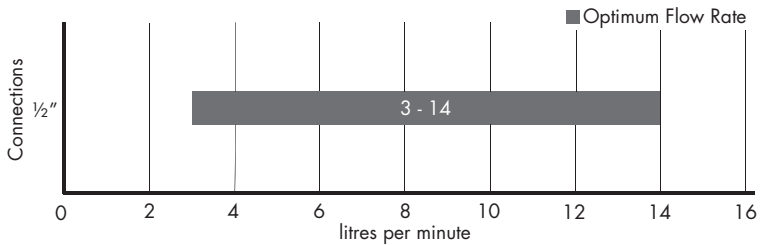



## **Please leave this Manual for the User**

To activate your product warranty please visit

**[www.intatec.co.uk](http://www.intatec.co.uk)**

and click on Product Registration

**Intatec Ltd**

Airfield Industrial Estate

Hixon

Staffordshire

ST18 0PF

Tel: **01889 272 180**

Fax: **01889 272 181**

email: **[sales@intatec.co.uk](mailto:sales@intatec.co.uk)**

web: **[www.intatec.co.uk](http://www.intatec.co.uk)**

E & O.E

© Intatec Ltd 2022

20-05-22